

# TROUBLISHOOTING TIPS HHXDF5

## **Engine will not turn over**

- 1. Check battery voltage
- 2. Check battery cables(clamps are tight)
- 3. Check ign. switch(make sure it is plugged in to harness
- 4. Look to see if battery light is on. If not check 20 and 60 amp fuse in

### **Power Relay Module**

- Engine turns over will not start
- 1. Turn key to 1st position listen for fuel pump
- 2. No fuel pump noise, check seat switch(for gas operation)
- 3. Insure selector switch in correct mode (gas. Propane)
- 4. Insure selected fuel is available
- 5. Check fuses in fuse panel(fuel pump fuse)

#### Low performance

- 1. Check engine idle speed, engine high speed RPM's
- 2. Inspect condition of belt
- 3. When machine is running, observe the upper and lower clutch. Insure they are opening and closing correctly.

#### Machine operation. Hard to steer, rocking

- 1. If machine is hard to steer. Check steering cylinders for loose hardware
- 2. Check hydraulic belt for proper tension(below fan front of engine)
- 3. If machine rocking, check all hardware on "pork chop" for tightness
- 4. Inspect fir bent components
- 5. Remove "pork chop" install blades check if machine still rocking. If machine still rocks possible bent arm or output shaft